

## TMT 15<sup>®</sup> - Determination of the content, density and pH-value


### Analytical procedure / Info 3 E

The analysis should be performed on a clear and, if necessary, filtered sample.

#### 1. Determination of content

The trimercaptotriazine tri-sodium-salt (TMT-Na<sub>3</sub>) is determined by potentiometric titration with 0.5 Mole/l sulphuric acid. 5 ml TMT 15<sup>®</sup> are added to a 150 ml beaker using a pipette, diluted with about 100 ml deionised water and titrated with 0.5 mole/l sulphuric acid.

The trend of the pH is measured during the titration using a pH electrode (e. g. Schott, H 61) and plotted by a chart recorder. A titration curve results with three points of inflexion, which correspond to the three necessary acid equivalents to transfer the TMT-Na<sub>3</sub> into the so called H-form (Diagram on page 3)

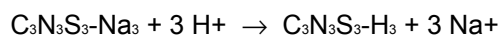

For the calculation of the content, only the first point of inflexion (at pH 10.1) and third point of inflexion (at pH 4.0) are used, since these enable the best calculation.

#### Calculation

$$\frac{(V_3 - V_1) \times 243.22 \times 0.01}{D} = \% \text{ TMT-Na}_3$$

V<sub>3</sub> = ml 0.5 mole/l H<sub>2</sub>SO<sub>4</sub> at 3rd point of inflexion (pH 4.0)

V<sub>1</sub> = ml 0.5 mole/l H<sub>2</sub>SO<sub>4</sub> at 1st point of inflexion (pH 10.1)

D = Density (approx. 1.12 g/ml for TMT 15<sup>®</sup>)

243.22 = molecular weight of TMT-Na<sub>3</sub> (g/mole)

0.01 = calculation factor for %

#### Example for calculation

$$\frac{(10.3 - 3.35) \times 243.22 \times 0.01}{1.12} = 15.1 \% \text{ TMT-Na}_3$$

#### 2. Determination of density

The density of TMT 15<sup>®</sup> is measured in a 250 ml graduated cylinder using an aerometer. It is approx. 1.12 g/ml.

#### Sales & Marketing:

Evonik Degussa GmbH

Rodenbacher Chaussee 4

63457 Hanau

Germany

IC-AK-SK

Phone: +49 6181 59-4107 Fax: +49 6181 59-4266

E-mail: [tmt@evonik.com](mailto:tmt@evonik.com)

<http://www.tmt15.com>

#### Applied Technology:

Evonik Degussa GmbH

Rodenbacher Chaussee 4

63457 Hanau

Germany

IC-AK-SK-AT

Phone: +49 6181 59-2854 Fax: +49 6181 59-4266

E-mail: [tmt@evonik.com](mailto:tmt@evonik.com)

<http://www.tmt15.com>

Product Information

03/29/2007


ID 4476

Page 1/2

### 3. pH-value

The pH of TMT 15<sup>®</sup> is measured using a pH-meter with a combined electrode system. The electrode is calibrated with buffer solutions (e.g. pH 7 and pH 10). The pH-value of TMT 15<sup>®</sup> is approx. 12.3.

**Diagram:** Potentiometric Titration of TMT 15<sup>®</sup> with Sulfuric Acid

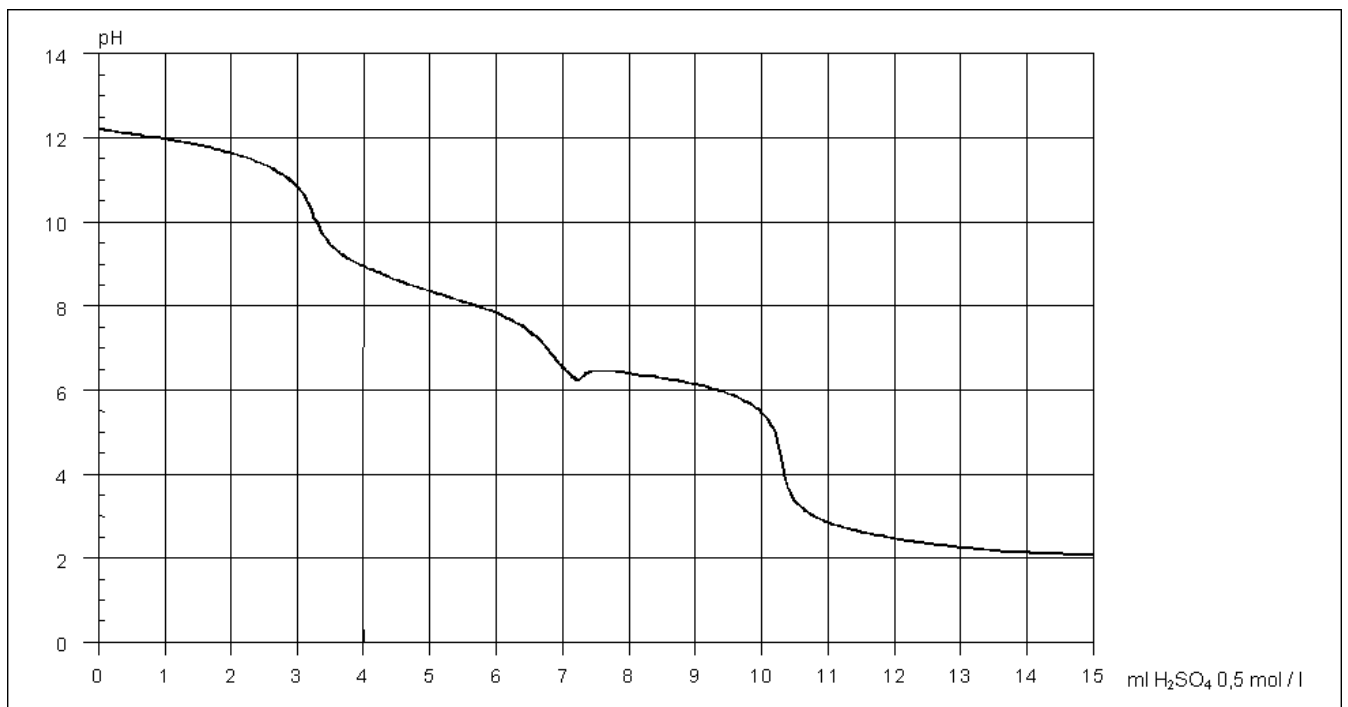

### Hazard warning

TMT 15<sup>®</sup> is classified "Irritant". For information on labeling, transport classifications, first aid and toxicology, please see the current safety data sheet.

This information and all further technical advice is based on our present knowledge and experience. However, it implies no liability or other legal responsibility on our part, including with regard to existing third party intellectual property rights, especially patent rights. In particular, no warranty, whether express or implied, or guarantee of product properties in the legal sense is intended or implied. We reserve the right to make any changes according to technological progress or further developments. The customer is not released from the obligation to conduct careful inspection and testing of incoming goods. Performance of the product described herein should be verified by testing, which should be carried out only by qualified experts in the sole responsibility of a customer. Reference to trade names used by other companies is neither a recommendation, nor does it imply that similar products could not be used.